







SEA VISION LIGHTS MAINTENANCE AND CARE


Thank you for purchasing Sea Vision underwater lights. We manufacture the best quality lights on the market and are recognized as an industry leader. The lights have been rigorously tested to provide you with a product that will last for years if properly maintained. Sea Vision underwater lights require very little maintenance, but they are not maintenance free. Below you will find information on the maintenance and care of our underwater lights and following this information will help extend the life of your lights and give you years of enjoyment. All lights are warranted for two years.

Every 6 months:

-  Remove light backing cap, lamp, reflector and then check light lens for leaks or corrosion.
-  Make sure all gaskets, o-rings and threads are in good condition.
-  Spray all exterior light components with waterproofing / lubricant / protectant of your choice.
-  Clean the exterior light lens using a soft plastic scraper or soft scrub brush.




SV16 model

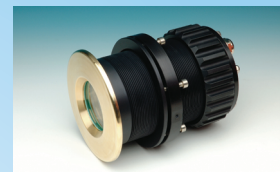

SV10 model




SV20 model

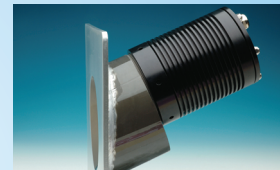

SV14-alu model




SV19 model

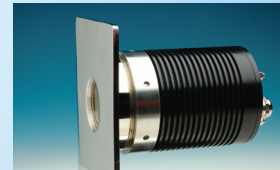


SV14-ss model


Every 2 to 3 Years:

-  When the boat is hauled out of the water, remove the light lens and replace the glass gaskets (for SV10 and SV14 lights only)


Halogen and HID Troubleshooting and Repair Guide

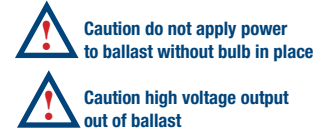


HID DC Voltage

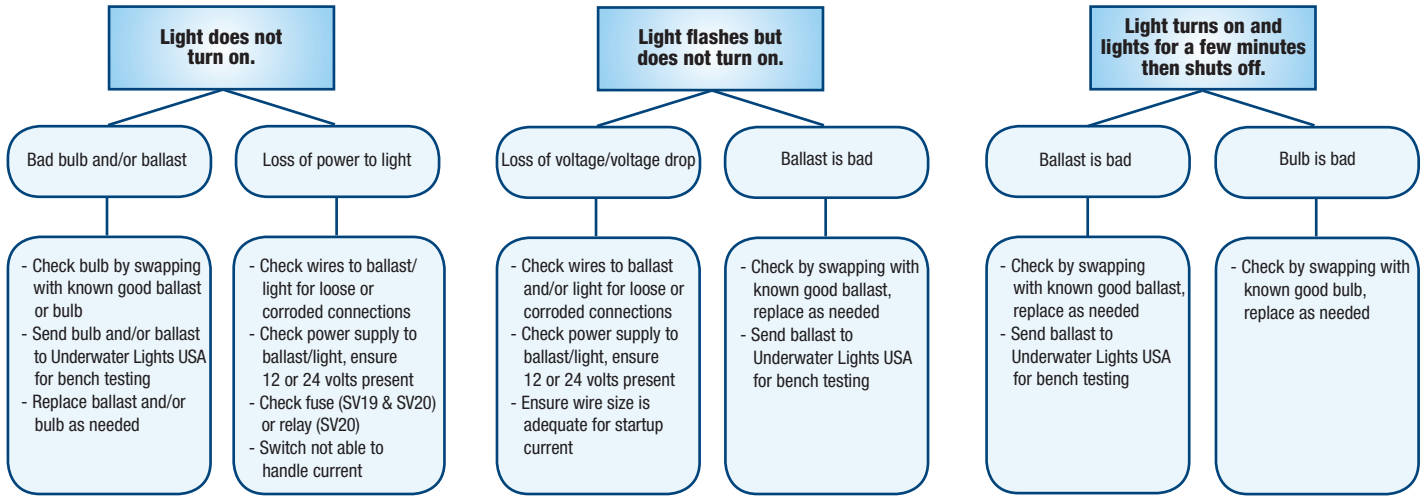

HID AC Voltage

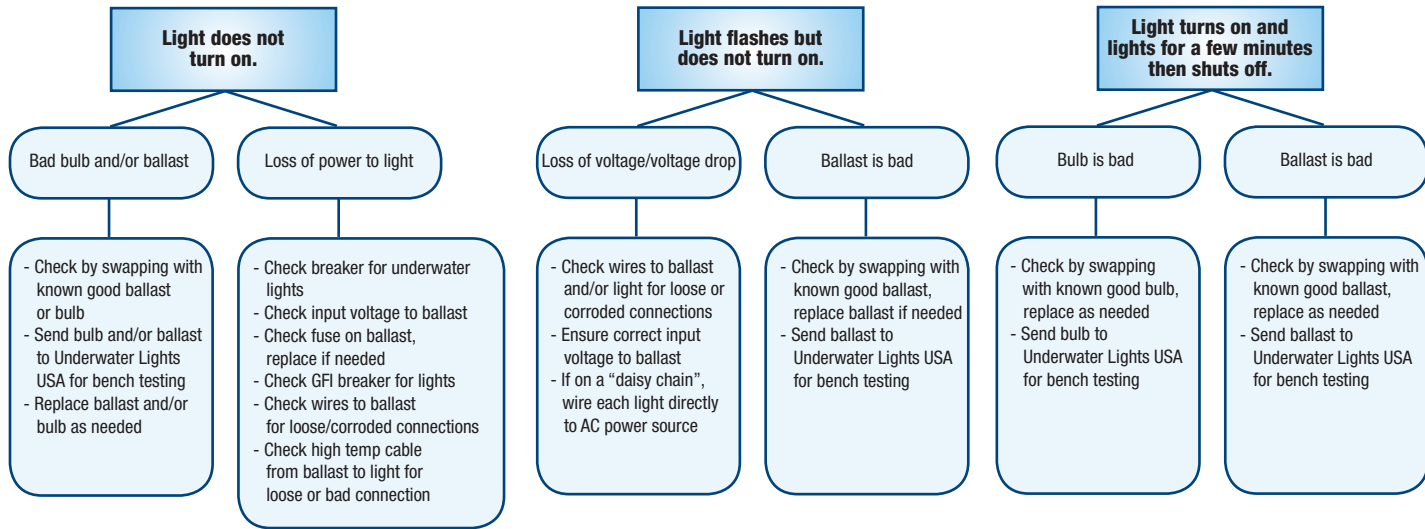

Halogens

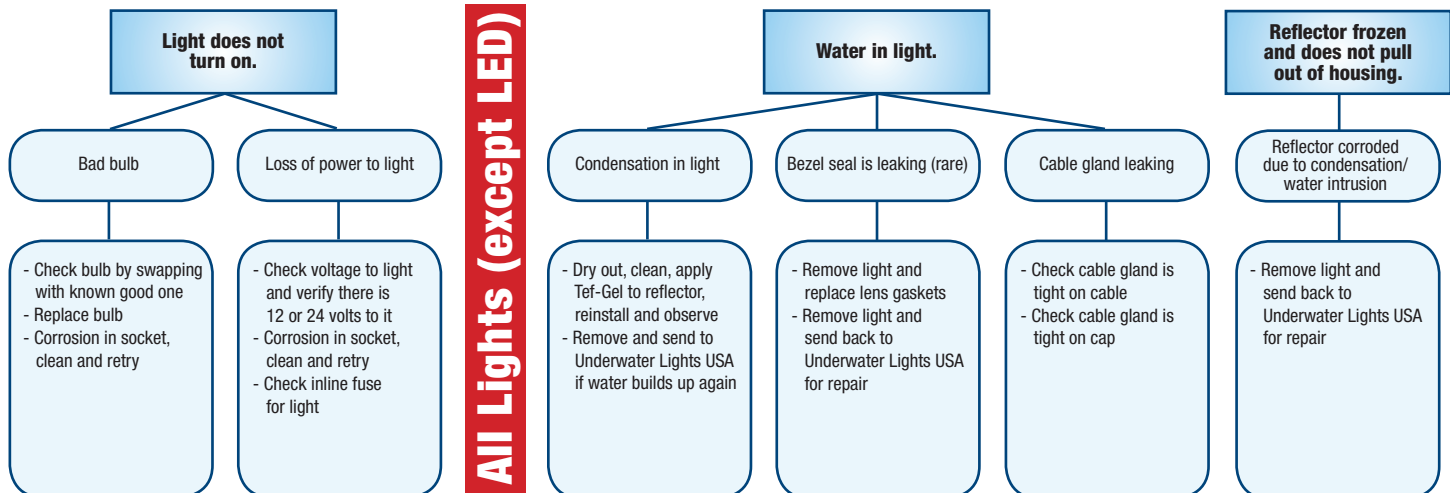

ALL LIGHTS (except LED)